

LM68005 MANUAL



CONTENTS



Please read and follow all safety and operating instructions listed in this user manual prior to use. Basic precautions should always be used when operating an electrical appliance.

Safety Instructions	 2
Product Components	 7
Chair Installation	 9
Remote Controller	 15
Operation Guide	 16
Troubleshooting	 22
Maintenance	 23
Product Specifications	 24

SAFETY INSTRUCTION

- Please read this manual carefully to make sure the installation and operation of the massage chair is correct.
- "Safety Instructions" are provided in both Warning and Caution for important safety information.

Both Warning and Caution are important safety caution, please be more cautious.

This sign indicates warning of causing possible

4	death or hurt to body.	
\bigvee	Caution This sign indicates caution of causing possible pain or damage to body.	
\bigcirc	This sign indicates forbidden behavior.	
•	This sign indicates must follow instruction to operate.	
0	This sign indicates self disassembly is forbidden.	
0 6	This sign indicates correct operation of cable.	
		·

• The following should be kept for any further references.



Marning

 Osteoporosis patient; People with heart disease including embedded pacemaker or other medical electronic device inside the body; For pregnant women or people with health issues, please consult doctor before use; Patients with a high fever forbid to use this machine. Perceptual disabilities patients forbid to use this machine. People over 80 years old forbid to use this machine. Kids and the drunk people are not allowed to use the chair; Please don't sleep in the chair. Don't use the chair when your body is wet. 	People who are not suitable to use the chair
 Make sure there are no kids or pets or other objects around (under, behind or in front of) the chair at the moment of backrest, leg-rest up/down or leg-rest retraction/extension from reclining position. During operation, if body is being abnormal, please stop the operation and go consult with your physician. Please do not take strong massage on the head. Do not massage belly or knees, be careful when massaging neck Children or pets are not allowed to play on the chair especially during massage. Standing or sitting on the back or armrest is not allowed either. Those who move around with difficulty or can't express themselves must be taken care of strictly and continuously during massage. 	Accident /injury
 Insert the plug of the chair into correct and suitable power socket. Make sure the plug is completely inserted into the socket to reduce short circuit or fire risk. Unplug the power when not in use, stop all massage functions and turn off on/off key before unplugging. 	Fire and electric shock
 Massage cushions of the chair are not allowed to fold for storage. The machine is forbidden for no-load running for a long time. 	Accident
 Power cord, plug, socket can't be used in broken or loose contact condition. Don't use other electric power except rated voltage in case of fire, electric shock or any breakdown. Any broken, re-process, knotted, twisted power cord or pressed under heavy cargo is not allowed to use. 	Fire and electric shock
	 People with heart disease including embedded pacemaker or other medical electronic device inside the body; For pregnant women or people with health issues, please consult doctor before use; Patients with a high fever forbid to use this machine. Perceptual disabilities patients forbid to use this machine. Pictore and the drunk people are not allowed to use the chair; Please don't sleep in the chair. Don't use the chair when your body is wet. Make sure there are no kids or pets or other objects around (under, behind or in front of) the chair at the moment of backrest, leg-rest up/down or leg-rest retraction/extension from reclining position. During operation, if body is being abnormal, please stop the operation and go consult with your physician. Please do not take strong massage on the head. Do not massage belly or knees, be careful when massaging neck. Children or pets are not allowed to play on the chair especially during massage. Standing or sitting on the back or armrest is not allowed either. Those who move around with difficulty or can't express themselves must be taken care of strictly and continuously during massage. Insert the plug of the chair into correct and suitable power socket. Make sure the plug is completely inserted into the socket to reduce short circuit or fire risk. Unplug the power when not in use, stop all massage functions and turn off on/off key before unplugging. Massage cushions of the chair are not allowed to fold for storage. The machine is forbidden for no-load running for a long time. Power cord, plug, socket can't be used in broken or loose contact condition. Pon't use other electric power except rated voltage in case of fire, electric shock or any breakdown. Any broken, re-process, knotted, twisted power cord or



Warning



- · If the chair is dysfunctional, or is broken, splashed with water or falls into water, please have it repaired by professional repairman or send the chair to assigned service agent. Self-modification, disassembly or maintenance is forbidden.
- · If power cord or plug is damaged, please don't replace it yourself, please contact us or appointed dealer for replacement.
- · To avoid electric shock or body injury, please don't open or disassemble any part of the chair, there is not any attached part of the chair for maintenance by customers.
- Check leather or cloth material on the back and other areas is broken or not. If broken, even though it is small, please stop using the chair, unplug the power and have it repaired.

Disassembly and maintenance

\triangle	Caution
/ · /	0441011

	Please operate the chair when it is flat or on leveled place	To avoid sudden falling.
	 Position the chair 4 inches from the wall to allow for sufficient space to recline up and down. 	To make sure the back lying.
•	 The maximum suggested operating time is 20 mins. 5 mins for each position beginning with the slight- step massage. Along continuous massage in the same position may cause uncomfortable feeling. 	Too long time massage is bad for your body.
	 Before sitting on the chair to avoid injury please inspect everything to confirm that the massage heads are in the correct position. 	To avoid accidental
	Please make sure that the power switch is on "OFF" position before inserting the plug into the socket.	injury.
	Turn off all controls before removing plug from outlet.	To avoid the accident when turn on the powe
	Make sure the plug is completely inserted into the socket.	
	Checking whether there are any damages on the wire and make sure there are no water or rubbish on the wire.	To reduce short circuits and any fire hazard.
	Installing the wire in a correct way. The plug must be inserted into socket with the connect, the connect couldn't be bent or cut off.	To avoid electric shock in any leakage or breakdown.
	 Don't use or store the chair in the wet environment like near the swimming pool, or bathroom. Keep the chair and remote control dry at all time. Don't use the chair when your body is wet. 	To avoid leakage or electric shock.

	<u> </u>	
\Diamond	 Don't press with hands or step on the massage heads with feet. Don't put hands between the working massage heads. Don't put hands or feet in the gap of mechanical parts. Don't drop or insert anything into the slot of massage chair. Don't stand or sit or put anything on the backrest, armrest, or leg-rest. Don't stand on the chair during operation. Don't move the chair during operation. Don't pull out the plug or turn off the power during operation. Don't put your hands or head between leg-rest or beneath. Don't use the massage chair while wearing hair ornaments. Don't put hard things in pocket when take buttocks and huckle massage. Don't sit or press on the backrest when the chair is in reclining position. Don't use on bare skin or wearing thin clothes, thin clothes may cause better massage effect, But it also may cause irritation to the skin or cryogenic burns. 	To avoid accidents or injury
	 Keep the chair away from heat, wet, sharp things and corrosive, inflammable, explosive environment. To use electric blanket or other heating products on the chair is forsidden. Don't put in the space of dust serious or corrosive gas environment. Don't put the chair in a small space places or use in the bad air circulation places. Keep the chair away from stove or other heating products. Don't put the chair directly under the sun or other high temperature places. 	To avoid fade, discolor on upholstery or hardened, deteriorated on PU.
•	 Don't use the chair in outdoor. Make sure to install the wire in correct way(Incorrect install way may cause electric shock. If you don't know how to install, please find a professional electrician) Don't use plug adapter (If the enclosed plug doesn't match with socket, please don't change the plug by yourself and find a professional electrician to install a matched socket.) 	To avoid electric shock.

SAFETY INSTRUCTION

**************************************	Unplug the power before cleaning the chair.Unplug the power after using the chair.	To avoid
	Unplug the power when any damage on the power.	electric shock or fire
	 Hold the plug to unplug the power but to not try to pull the wire to unplug the power. 	harzard.
	 Please turn off the power switch and unplug the power after massage. 	To avoid accidents
	 Unplug the power immediately when electricity goes off. 	To avoid damage or accidents wher power on again.



Warning: 1.Do not use it when gets wet.

- 2. The disabled ot people who need supervision.
- 3. The chair has heat function, people who are insensitive to heat must pay high attention.

Grounding instruction

The chair is equipped with a cord having a grounding conductor. The plug must be plugged into an appropriate socket that is properly installed and matched with the plug.




Earth wire is not allowed to be in these places

Gas pipe: probably cause explosion or fire. Phone wire and lightning rod: probably cause electric shock and fire when thundering.


Water pipe: earth wire is useless where there are plastics

Main body diagram (Front)

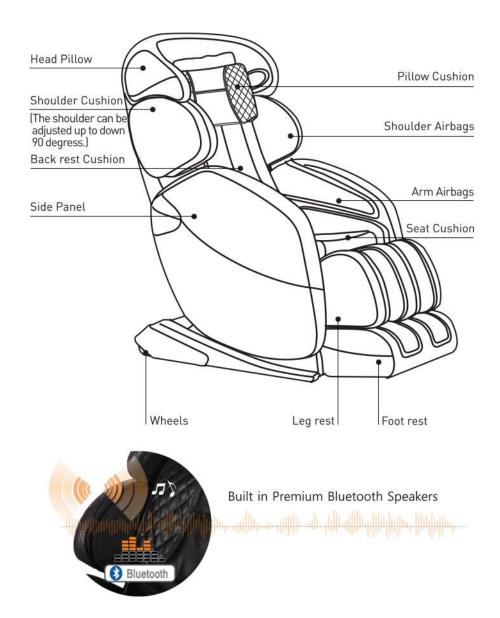



PRODUCT COMPONENTS

| Main Body Diagram (Rear) |

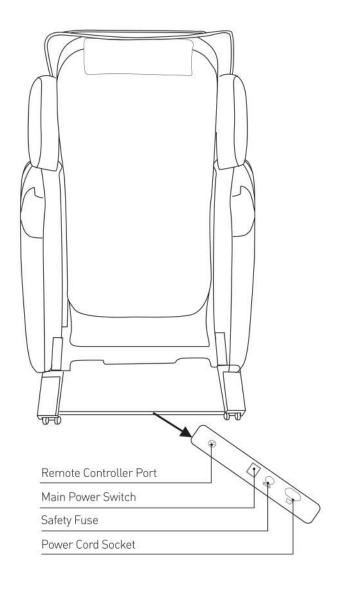

1. Remove the package and take out the chair parts and components

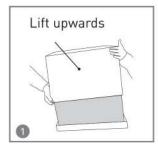

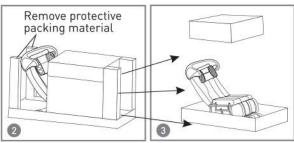

Remove the carton.

material.

Take out the packing Take out all parts including component list below with seat cushion and pillow.

Components

- 1. A screw driver and Allen-wrench is needed to complete installation.
- 2. Allen wrenches are included in the parts bag, but you will need a screw driver as well.
- 3. Please remove Velcro-cover when you attach Velcro.
- 4. Extra Foot Paddings for softer foot massage are included for personal preference.



BODY



SIDE PANEL X 2



SIDE PANEL LEFT X 1 / RIGHT X 1




SHOULDER PANEL SCREWS X 3 EACH




SIDE PANEL BOLTS X 2 EACH

^{*}The spare parts include:remote control, holder, user manual wheel, power cord.

2. Install the side arm panel

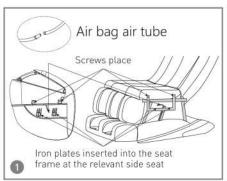

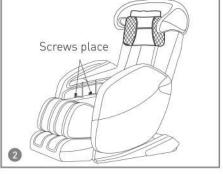


Connect the side arm panels by inserting the plastic forks into the chair metal frame as shown above in the pictures.

Align the side arm panel holes and the holes in the chair with screw driver to make sure holes are aligned. Use the screws to lock-in arm panel to the chair.

Both side panels installation x 2

* Extra air hose connector is included to hold the spring inside the chair. You can remove one of the connector with your hand and connect the air hoses.

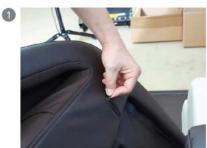

Open the zippers on side panel



Connect Airtubes



Make sure bolts are aligned with the holes before screwing them into place.



Close the zipper

Tube connection check list

1.Incorrect tube location connection




Tube must come out behind the visible frame, please see the image above

2.Correct tube location connection




If tube connection position is incorrect, please change the tube connection like the pictures shown above.


3. Install the shoulder panel

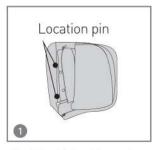

Find the 2 locating pin and screw holes.

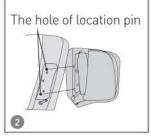


Connect the location pins on the shoulder panel and the chair as shown above and use the screw drivers with screws to lock them in place.

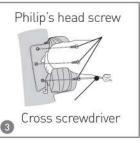


Connect the tube with tube connector on the chair.



Zip up the cover after everything is properly connected and secured.

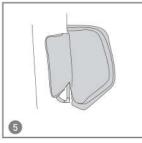

steps, smooth out any creases in the cushions.

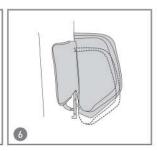

Double check the installation Shoulder airbag adjustable to target different shoulder height.



side panel





Open the zipper on Connect Airtubes Make sure that the screws are inserted straight into the holes.



Close the zipper

4. Install the seat cushion

- 1. Take out all Velcro covers on the chair.
- 2. Connect the heating cable to the chair.
- 3. Match all Velcro covers and zip up the zippers on the top and bottom.



Arrange seat cusion neatly



Connect remote controller




Connect remote controller cable towards the back of the chair.



Connect main power cable

5. Moving the massage chair

After completing the installation, put the chair in incline / upright position to move the chair easily.

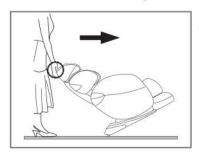


 As illustrated, tilt the chair back onto it's wheels at 45° angle. Slowly push and maneuver the massage chair to desired location. Lower massage chair slowly and smoothly until it is fully flat on the ground.



- * Do not move massage chair when occupied or in use.
- * Moving the massage chair may cause damage to the floors. Floor protection is recommended (e.g. rugs or carpet).
- * Do not drop or suddenly let go of the chair when moving as it may damage the chair.
- * Two persons are recommended when moving and extra care when handling the massage chair.
- * Make sure power plug & remote is disconnected to prevent damages. Warranty will not cover the power cord & remote if the chair is moved with the plugs connected.


6. Place the massage chair in an open area

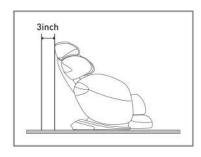

- Allow sufficient space around the chair for recline purposes.
- 3 inch distance for the back side and 19.7 inch in front of the foot rest.



Remote Controller

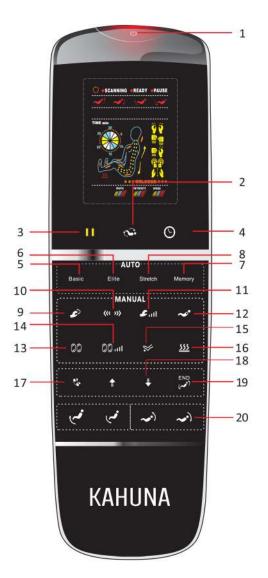

- On/Off Massage chair
- 2. Zero gravity button
- 3. Pause/Emergency stop
- 4. Time control button
- 5. Basic auto programs for daily use
- Elite auto programs for targeted area and senior mode
- Memory button to save customized program
- 8. Stretching auto programs
- 9. Manual massage type
- 10. Roller width
- 11. Massage speed
- 12. Fixed point Massage
- 13. Air massage on/off and area
- 14. Air massage intensity
- 15. Foot roller
- 16. Heating
- 17. Roller massage area
- 18. Roller Position up / down button
- 19. End position change button
- 20. Chair and leg position up / down button

OPERATION GUIDE

Function description of Controller buttons



Start or Stop massage chair

Press this button, massage chair will be ON, screen will be ON, User can choose auto or manual function to massage.


Press this button again, massage chair will be off, massage stopped, massage chair will come back to the original position, all buttons are inactive. When the chair returns to the original position the chair will completely shut off.



Press to temporarily pause the massage, chair will end idle mode. Press again to resume massage.



Press the button once, massage back and leg position to zero G1, press twice, the position to zero G2 twice, press third times, the position to zero G3, press fourth times, the massage chair return to original position.

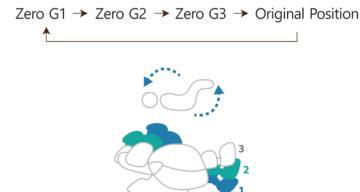

PS: The position adjustment button have no function when the chair in the stretching programs.

Main Body Diagram (Rear)



Press and hold on to the button to adjust the footrest positions.



Press and hold on to the button to adjust the back rest positions.

PS: The position adjustment button have no function when the chair in the stretching programs.





- <u> 555</u>
- Press the button to turn on/off the heating function.
- **†** •

Roller location adjustment: Hold the up or down arrow to move the massage rollers to the desired location.

- 0
- 5-30 minutes interval adjustments, to select your desired massage duration time. 5 minutes additional intervals time for reach button press.
- This is the pressure position button. Each time you press the button, it will change the area the air massage is concentrating on.

OPERATION GUIDE

Auto mode



4 Basic Daily Programs

- Refresh: Start your day fresh with a gentle awakening massage with tapping mixed with kneading and combination techniques.
- 2. Energize: Recharge your body with various techniques mainly with kneading combination techniques.
- 3. Deep Tissue: Get your body recovered fast with knocking, tapping and kneading combination techniques.
- 4. Sleep Aid: Another relaxing full body program that uses gentle techniques to aide your body and mind to a better sleep.

Elite

Elite Target Programs

- Elite Upper body: Target area program focuses on neck, shoulder, upper back.
- 2. Elite Back: Target area program focuses on the waist and lower back.
- 3. Elite Lower Body: Target area program focuses on lower back to buttocks.
- 4. Elite Senior Mode: Full-body mixed technique gentle massage with low intensity.

Stretch

Kahuna Stretching Program

- Yoga Stretching: Popular Kahuna signature auto stretch program designed to eliminate toxins and waste also relieving stress leaving your body rejuvenated and relaxed.
- 2. Active Stretching: Faster pace Kahuna program with mixture of kneading + tapping combination and tapping + Rolling technique to actively stretch your body.
- 3. Dynamic Stretching: New Kahuna stretching program for your entire back that performs the perfect balance of various techniques mixed dynamically.
- 4. SV-Chiro Stretching: Faster pace Kahuna program with another Chiro series program Knocking and Rolling (Shiatsu) + tapping technique combinations.

Manual functional area



To initiate memory function press it for 3 seconds and select the manual functions you want such as heating, roller, air massage settings. To save press it another 3 seconds and it will save it. To start the memorized program, simply press once and it will start your customized setting.



Massage position button.



Manual massage technique button,

Kneading → Tapping → Dual → Shiatsu → Massage → Off

↑



Press to adjust massage roller widths from narrow to medium to wide. Width adjustment is not available in kneading mode.



Press to increase the speed of the massage rollers, with 3 speed variations to select from.



Spot massage button, fixed roller position massage.



Air pressure strength adjustment, there three kinds of strength, power on default strength is the second strength.




Press the button and hold on to adjust the footrest independently.




Press the button and hold on to adjust the massaging position of back-rest and legrest.

2 Display diagram

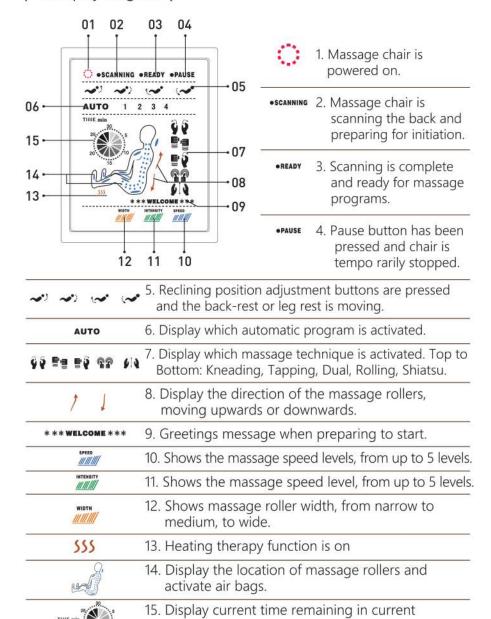


massage program.

3 After use

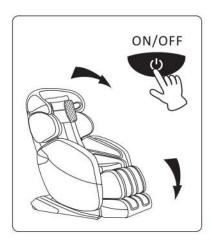

1. After the massage program is completed return the massage chair to upright position by turning off the massage chair.

Please check the surrounding prior to adjust the recline angle, paying special attention to children or pets that may be in close proximity.

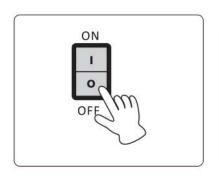

- 2. Press the power button to power off the massage chair and return remote controller to the storage area on arm pocket.
- 3. Turn off main power switch when you are not using the chair for a long period of time. Remove Plug from the power outlet to avoid accidents by kids and pets.
- 4. Do not operate with wet hands.

TROUBLE SHOOTING

If the sounds or movements are not normal, please turn off the massage chair and remove the plug from the electric outlet.


Please contact the customer service department for further assistance.

855.646.9500 / 1.714.388.2625, service@kahunachair.com

Problem	Solution
The massage chair is connected to power but is not functioning.	Check to see if the power plug is inserted or if the power outlet is functioning properly.
The remote controller is responding, but the massage chair is not functioning.	The massage chair may have automatically shut down due to overheating protection devices. Please turn off the power and allow the chair to cool off for 30 to 50 minutes.
Both the remote controller and massage chair are not responding.	The massage chair automatically turns into "full stop" mode when a massage program is completed. Please press the power button again to turn of the chair.




KAHUNA CHAIR PRODUCT WARRANTY REGISTRATION https://www.kahunachair.com/services/

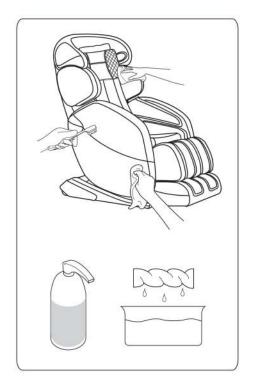

Use dry cloth to clean

Turn off and pull out the plug before cleaning the massage chair, do not touch the plug with wet hands.

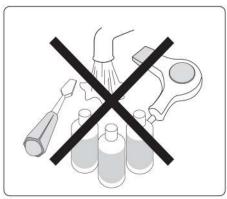

Prohibit using liquid cleaning products like water, alcohol, or other cleaning product to maintain a good quality.

PRODUCT SPECIFICATIONS

Description	Specifications
Product Name	Kahuna Massage Chair
Model No.	LM 6800S
Rated Voltage	110-120V~
Rated Frequency	50/60Hz
Rated Power Consumption	230 W Max.
Dimension (LxWxH) Inches	70 x 30 x 33.5 inches
Weight (LBS)	Net Weight: 207 lbs Gross Weight: 238lbs



Product KAHUNA Massage Chair

Model LM 6800S

Distributed by AJX Distribution INC

11125 Knott Ave, Suite D

Cypress, CA 90630

Tel 1-855-646-9500

Email INFO@KAHUNACHAIR.COM



You must register warranty at www.kahunachair.com/services/

INSTRUCTION MANUAL MODEL: LM 6800S

Please read this user manual thoroughly prior to operating the massage chair. Store this booklet for future reference.